### DIMENSION Q-Series

# QS20.481

48V, 10A, SINGLE PHASE INPUT




## **1. GENERAL DESCRIPTION**

The most outstanding features of this Dimension Q-Series power supply are the high efficiency and the small size, which are achieved by a synchronous rectification and further novel design details.

With short-term power capability of 150% and builtin large sized output capacitors, these features help start motors, charge capacitors and absorb reverse energy. A wide range input voltage design and a negligible low input inrush current make installation and usage simple. Diagnostics are easy due to the DC-ok relay, a green DC-ok and a red overload LED.

Unique quick-connect spring-clamp terminals allow a safe and fast installation. Many global approvals make this unit suitable for nearly every situation.



## 3. Order Numbers


Power Supply	QS20.481	48-55V unit
Accessory	ZM1.WALL ZM15.SIDE YR2.DIODE	Wall mount bracket Side mount bracket Decoupling module

### POWER SUPPLY

- AC 100-240V Wide-range Input
- Efficiency up to 94.3%
- Width only 82mm
- 150% Peak Load Capability
- Active Power Factor Correction, PFC
- DC Input from 88 to 375Vdc
- Short-term Operation from 60Vac to 300Vac
- Full Power Between -25°C and +60°C
- Negligibly Low Inrush Current
- **DC-OK Relay Contact**
- **Quick-connect Spring-clamp Terminals**
- 3 Year Warranty

## 2. SHORT-FORM DATA

Output voltage	DC 48V	
Adjustment range	48-55V	
Output current	10A	continuous, 48V
	15A	for typ. 4s, 48V
Output power	480W	continuous, 48V
	720W	for typ. 4s, 48V
Output ripple	< 100mVpp	20Hz to 20MHz
Input voltage	AC 100-240V	±15%
Mains frequency	50-60Hz	±6%
AC Input current	4.56 / 2.48A	at 120 / 230Vac
Power factor	0.95 / 0.90	at 120 / 230Vac
AC Inrush current	typ. 9 / 7A peak	at 120 / 230Vac
DC Input voltage	DC 110-300V	-20%/+25%
DC Input current	4.7 / 1.7A	at 110 / 300Vdc
Efficiency	92.8 / 94.3%	at 120 / 230Vac
Losses	37.2 / 29.0W	at 120 / 230Vac
Temperature range	-25°C to +70°C	operational
Derating	12W/°C	+60 to +70°C
Hold-up time	typ. 32 / 51ms	at 120 / 230Vac
Dimensions	82x124x127mm	WxHxD

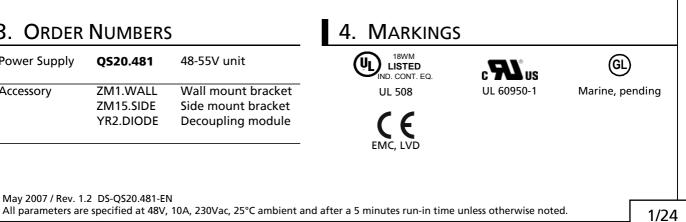

www.pulspower.com Phone +49 89 9278 0 Germany



May 2007 / Rev. 1.2 DS-QS20.481-EN

2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel: 03 26 82 49 29

### DIMENSION Q-Series

# QS20.481

48V, 10A, SINGLE PHASE INPUT

### INDEX

## Page

1.	General Description	1
2.	Short-form Data	1
3.	Order Numbers	1
4.	Markings	1
5.	AC-Input	3
6.	Input Inrush Current	4
7.	DC-Input	4
8.	Output	5
9.	Hold-up Time	7
10.	DC-OK Relay Contact	7
11.	Efficiency and Power Losses	8
12.	Functional Diagram	9
13.	Front Side and User Elements	9
14.	Terminals and Wiring	.10
	Reliability	
16.	EMC	.11
17.	Environment	.12
18.	Protection Features	.13
19.	Safety	.13
20.	Dielectric Strength	.13
	Approvals	

### INDEX

### PAGE

22.	Fulfilled Standards 14	ł
23.	Used Substances 14	ł
24.	Physical Dimensions and Weight 15	5
25.	Installation and Operation Instructions 16	5
26.	Accessory 17	7
27.	Application Notes18	3
	27.1. Repetitive Pulse Loading 18	3
	27.2. Peak Current Capability 19	)
	27.3. Back-feeding Loads 19	)
	27.4. Charging of Batteries 19	)
	27.5. Output Circuit Breakers 20	)
	27.6. External Input Protection	
	27.7. Parallel Use to Increase Output Power . 21	
	27.8. Parallel Use for Redundancy 21	
	27.9. Daisy-Chaining of Outputs 22	2
	27.10. Series Operation 22	2
	27.11. Inductive and Capacitive Loads 22	2
	27.12. Operation on Two Phases 23	3
	27.13. Use in a Tightly Sealed Enclosure 23	3
	27.14. Mounting Orientations 24	ł

## INTENDED USE

The power supply shall only be installed and put into operation by qualified personnel.

This power supply is designed for installation in an enclosure and is intended for the general use, such as in industrial control, office, communication, and instrumentation equipment. Do not use this device in aircraft, trains and nuclear equipment, where malfunctioning of the power supply may cause severe personal injury or threaten human life.

## **TERMINOLOGY AND ABREVIATIONS**

PE and 🕀 symbol	PE is the abbreviation for <b>P</b> rotective <b>E</b> arth and has the same meaning as the symbol $\oplus$ .
Earth, Ground	This document uses the term "earth" which is the same as the U.S. term "ground".
T.b.d.	To be defined, value or description will follow later.
AC 230V	A figure displayed with the AC or DC before the value represents a nominal voltage with standard tolerances (usually ±20%) included. E.g.: DC 12V describes a 12V battery disregarding whether it is full (13.7V) or flat (10V) As long as not otherwise stated, AC 100V and AC 230V parameters are valid at 50Hz and AC 120V parameters are valid at 60Hz mains frequency.
230Vac	A figure with the unit (Vac) at the end is a momentary figure without any additional tolerances included.

## DISCLAIMER

The information presented in this document is believed to be accurate and reliable and may change without notice. Some parts of this unit are patent by PULS (US patent No 091662,063, Des. 424,529, ...). No part of this document may be reproduced or utilized in any form without permission in writing from the publisher.

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France E-mail:hvssystem@hvssystem.com Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

Site web : www.hvssystem.com

20mF, 48V, 10A, see Fig. 5-2

see Fig. 5-2

48V, 10A, SINGLE PHASE INPUT

## 5. AC-INPUT

Turn-on overshoot

AC input	nom.	AC 100-240V	wide-rang	ge input, TN-, '	TT-, IT-Mains, see Fig. 5-1
AC input range	min.	85-276Vac	continuou	us operation	
	min.	60-85Vac	full powe	r for 200ms, n	o damage between 0 and 85Vac
	min.	276-300Vac	< 500ms		
Input frequency	nom.	50 – 60Hz	±6%		
Turn-on voltage	typ.	82Vac	steady-sta	ite value, see <b>i</b>	Fig. 5-1
Shut-down voltage	typ.	64Vac	steady-sta	ite value, see <b>i</b>	Fig. 5-1
	typ.	53Vac	dynamica	l value	
		AC 100V	AC 120V	AC 230V	
Input current	typ.	5.47A	4.56A	2.48A	at 48V, 10A, see Fig. 5-3
Power factor *)	typ.	0.96	0.95	0.90	at 48V, 10A, see Fig. 5-4
Crest factor **)	typ.	1.6	1.7	2.05	at 48V, 10A
Start-up delay	typ.	640ms	610ms	660ms	SEE Fig. 5-2
Rise time	typ.	210ms	220ms	85ms	0mF, 48V, 10A, see Fig. 5-2

220ms

100mV

\*) The power factor is the ratio of the true (or real) power to the apparent power in an AC circuit.


typ.

max.


\*\*) The crest factor is the mathematical ratio of the peak value to RMS value of the input current waveform.


210ms

100mV

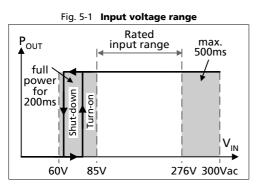



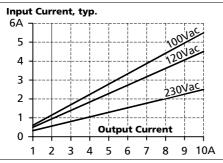


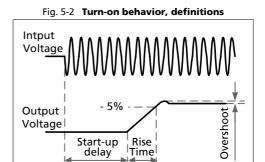

90ms

100mV



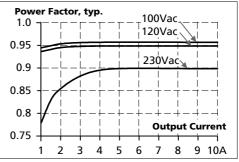

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany




2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

## 6. INPUT INRUSH CURRENT

An active inrush limitation circuitry limits the input inrush current after turn-on of the input voltage. The charging current into EMI suppression capacitors is disregarded in the first millisecond after switch-on (EN 61204).

		AC 100V	AC 120V	AC 230V	
Inrush current	max.	13A <sub>peak</sub>	13A <sub>peak</sub>	13A <sub>peak</sub>	-25°C to +70°C, mains interruptions > 750ms
	typ.	11A <sub>peak</sub>	9A <sub>peak</sub>	7A <sub>peak</sub>	-25°C to +70°C, mains interruptions > 750ms
Inrush energy	max.	5A <sup>2</sup> s	5A <sup>2</sup> s	5A <sup>2</sup> s	-25°C to +70°C, mains interruptions > 750ms
Inrush delay	typ.	400ms	400ms	650ms	




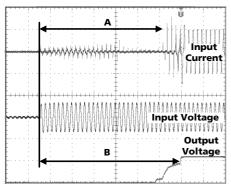

A:	Inrush delay
B:	Start-up delay
Input:	230Vac
Output:	48V, 10A
Ambient:	25°C
Upper curve:	Input current 5A / DIV
Medium curve:	Input voltage 500V / DIV
Lower curve:	Output voltage 40V / DIV
Time basis:	100ms / DIV

# 7. DC-INPUT

DC input	nom.	DC 110-300V		
DC input range	min.	88-375Vdc	continuous operation	
DC input current	typ.	4.7A / 1.7A	110Vdc / 300Vdc, 48V, 10A	
Turn-on voltage	typ.	73Vdc	steady state value	
Shut-down voltage	typ.	57Vdc	steady state value	

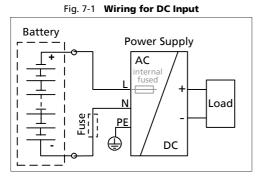

#### Instructions for DC use:

- a) Use a battery or similar DC source.
- b) Connect +pole to L and –pole to N.
- c) Connect the PE terminal to an earth wire or to the machine ground.

In case the –pole of the battery is not connected to earth, use an appropriate fuse to protect the N terminal.

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany

HVS.

2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

## **8.** OUTPUT

Output voltage	nom.	48V	
Adjustment range	min.	48-55V	guaranteed, multi turn potentiometer
	max.	59V	at clockwise end position of potentiometer
Factory setting		48.0V	±0.2%, at full load, cold unit
Line regulation	max.	10mV	60 to 300Vac
Load regulation	max.	100mV	static value, $0A \rightarrow 10A \rightarrow 0A$
Ripple and noise voltage	max.	100mVpp	20Hz to 20MHz, 50Ohm
Output capacitance	typ.	3 100µF	

### Continuous power capability

Output current	nom.	10A	at 48V, see Fig. 8-1
	nom.	8.7A	at 55V, see Fig. 8-1
Output power	nom.	480W	48V, continuous
	nom.	480W	55V, continuous
Short-circuit current	min.	15A	load impedance 100mOhm, up to 4s before hiccup mode
	max.	20A	starts, see Fig. 8-1 and Fig. 8-3

#### BonusPower<sup>®</sup>, short term power capability (up to typ. 4s)

The power supply is designed to support loads with a higher short-term power requirement without damage or shutdown. The short-term duration is hardware controlled by an output power manager. This BonusPower<sup>®</sup> is repeatedly available. Detailed information can be found in chapter 27.1. If the power supply is loaded longer with the BonusPower<sup>®</sup> than shown in the Bonus-time diagram (see Fig. 8-2), the max. output power is automatically reduced to 480W.

If the power requirement is continuously above 480W and the voltage falls below approx. 40V (due to the current regulating mode at overload), the unit shuts-off and makes periodical restart attempts. This behavior is called hiccup mode which is described below. If the voltage is above 40V, the unit continuously delivers current.

#### **Hiccup Mode:**

Up to 4s of overloading, the power supply delivers continuous output current. After this, the output power is reduced to nearly zero for approx. 17s before a new start attempt is automatically performed. If the overload has been cleared, the device will operate normally. If the overload still exists, the output current will be delivered for 2 to 4s (depending on the overload) again followed by a 17s rest time. This cycle is repeated as long as the overload exists. See Fig. 8-3. During the off-period a small rest voltage and rest current is present on the output.

Output current	nom.	15A	at 48V, see Fig. 8-1
	nom.	13.1A	at 55V, see Fig. 8-1
Output power	nom.	720W	48V, short term
	nom.	720W	55V, short term
Short-circuit current	min.	15A	load impedance 100mOhm, up to 4s, see Fig. 8-1
	max.	20A	load impedance 100mOhm, up to 4s, see Fig. 8-1
Bonus time	typ.	4s	at 48V, 15A, duration until the output voltage dips,
	min	3.5s	see Fig. 8-2
	max.	4.5s	

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France E-mail:hvssystem@hvssystem.com Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

Site web : www.hvssystem.com

56\

48

40

32

24


16

8


0

0


### DIMENSION Q-Series

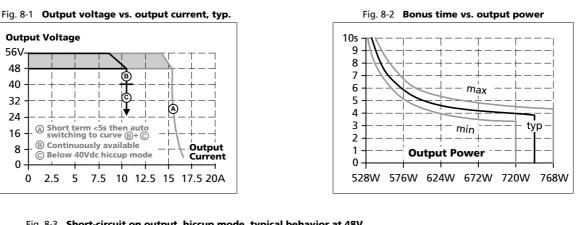


#### Fig. 8-3 Short-circuit on output, hiccup mode, typical behavior at 48V

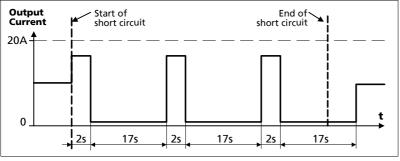

The Bonus Power<sup>®</sup> is available as soon as power comes on and immediately after the end of an output short circuit or output overload.

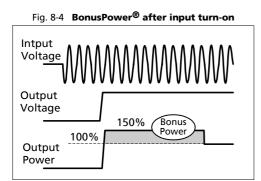

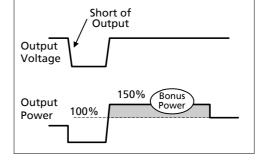

#### Fig. 8-5 BonusPower<sup>®</sup> after output short

#### Peak current capability (up to several ms)

The power supply can deliver a peak current which is higher than the specified short term current. This helps to start current demanding loads or to safely operate subsequent circuit breakers.

The extra current is supplied by the output capacitors inside the power supply. During this event, the capacitors will be discharged and causes a voltage dip on the output. Detailed curves can be found in chapter 27.2.

-		-	-
Peak current voltage dips	typ.	from 48V to 40V	at 20A for 20ms
	typ.	from 48V to 39V	at 40A for 2ms
	typ.	from 48V to 34.6V	at 40A for 5ms

May 2007 / Rev. 1.2 DS-QS20.481-EN

All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany




2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel: 03 26 82 49 29

E-mail:hvssystem@hvssystem.com Site web : www.hvssystem.com


DIMENSION Q-Series

48V, 10A, SINGLE PHASE INPUT

## 9. HOLD-UP TIME

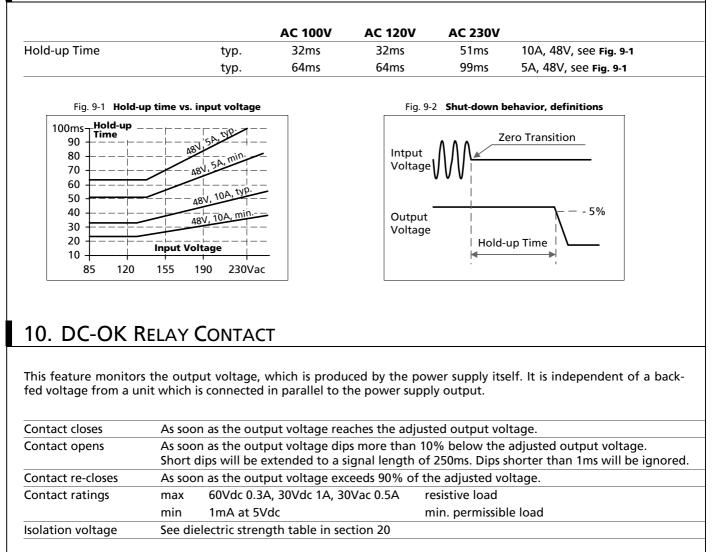



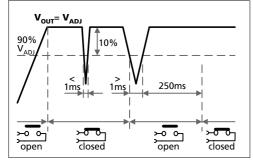

#### Note:

The DC-ok feature requires that the output voltage reaches the nominal (=adjusted) level after turn-on in order to function according to specification. If this level cannot be achieved, the overload LED will be on and the DC-ok contact will be open. The overload signal will only shut off as soon as the adjusted voltage is reached. This is an important condition to consider particularly, if the load is a battery, the power supply is used in parallel or the power supply is used for N+1 redundant systems.

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29


DIMENSION Q-Series

QS20.481

48V, 10A, SINGLE PHASE INPUT

## **11. EFFICIENCY AND POWER LOSSES**

		AC 100V	AC 120V	AC 230V	
Efficiency	typ.	92.0%	92.8%	94.3%	10A, 48V
Power losses	typ.	41.7W	37.2W	29.0W	10A, 48V
	typ.	9.0W	9.2W	10.0W	0A



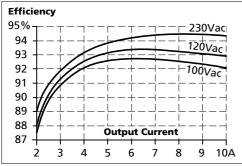


Fig. 11-3 Efficiency vs. input voltage, 48V, 10A




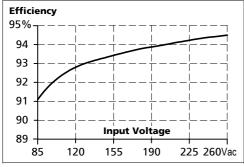


Fig. 11-2 Losses vs. output current at 48V

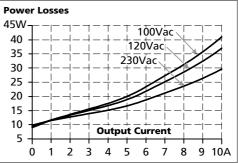



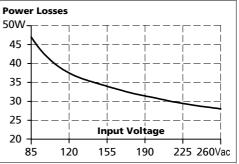

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany




2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

DIMENSION Q-Series

QS20.481 48V, 10A, SINGLE PHASE INPUT

## 12. FUNCTIONAL DIAGRAM

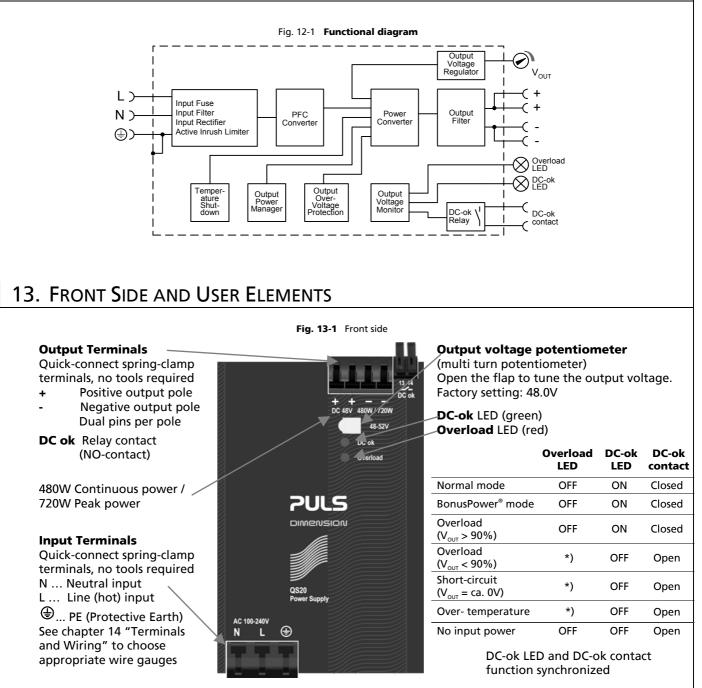

\*) Up to 4s of overloading, the power supply delivers continuous output current. After this, the output power is reduced to nearly zero for approx. 17s before a new start attempt is automatically performed. If the overload has been cleared, the device will operate normally. If the overload still exists, the output current will be delivered for 2 to 4s (depending on the overload) again followed by a 17s rest time. This cycle is repeated as long as the overload exists. The red overload LED is permanently on when the overload current is continuously flowing. During the 17s rest period, the red LED is flashing with a frequency of approx. 1.3Hz.

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany




2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29 E-mail:hvssystem@hvssystem.com Site web : www.hvssystem.com

## 14. TERMINALS AND WIRING

Туре	Bi-stable, quick-connect spring clamp terminals. IP20 Finger safe construction. Suitable for field- and factory installation. Shipped in open position.
Ferrules	allowed, but not required
Pull-out force	10AWG:80N, 12AWG:60N, 14AWG:50N, 16AWG:40N (according to UL486E)

	Power terminals	DC-OK-Signal terminals	
Solid wire	0.5-6mm <sup>2</sup>	0.3-4mm <sup>2</sup>	
Stranded wire	0.5-4mm <sup>2</sup>	0.3-2.5mm <sup>2</sup>	
American wire gauge	20-10 AWG	26-12 AWG	
Wire stripping length	10mm / 0.4inch	6mm / 0.25inch	

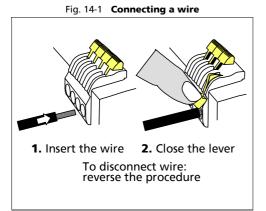

#### Instructions:

- a) Use appropriate copper cables that are designed for an operating temperature of: 60°C for ambient up to 45°C and 75°C for ambient up to 60°C minimum.
- b) Follow national installation codes and installation regulations!
- c) Ensure that all strands of a stranded wire enter the terminal connection!
- d) Up to two stranded wires with the same cross section are permitted in one connection point (except PE wire).
- e) Do not use the unit without PE connection.

## **15.** RELIABILITY

		AC 100V	AC 120V	AC 230V	
Lifetime expectancy	min.	49 000h	63 000h	92 000h	40°C, 48V, 10A
	min.	119 000h	128 000h	147 000h	40°C, 48V, 5A
	min.	138 000h	178 000h	> 15years	25°C, 48V, 10A
MTBF SN 29500, IEC 61709		407 000h	441 000h	469 000h	40°C, 48V, 10A
		749 000h	799 000h	840 000h	25°C, 48V, 10A
MTBF MIL HDBK 217F		204 000h	215 000h	229 000h	40°C, 48V, 10A, Ground Benign GB40
		273 000h	288 000h	308 000h	25°C, 48V, 10A, Ground Benign GB25

The **Lifetime expectancy** shown in the table indicates the operating hours (service life) and is determined by the lifetime expectancy of the built-in electrolytic capacitors.

Lifetime expectancy is specified in operational hours. Lifetime expectancy is calculated according to the capacitor's manufacturer specification. The prediction model allows a calculation of up to 15 years from date of shipment.

**MTBF** stands for **M**ean **T**ime **B**etween **F**ailure, which is calculated according to statistical device failures, and indicates reliability of a device. It is the statistical representation of the likelihood of the unit to fail and does not necessarily represent the life of a product.

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

# 16. EMC

The power supply is suitable for applications in industrial environment as well as in residential, commercial and light industry environment without any restrictions. CE mark is in conformance with EMC guideline 89/336/EEC and 93/68/EEC and the low-voltage directive (LVD) 73/23/EWG. A detailed EMC Report is available upon request

EMC Immunity	EN 61000-6-1 EN 61000-6	-2	Generic standard	ls
Electrostatic discharge	EN 61000-4-2	Contact discharge	8kV	Criterion A
		Air discharge	15kV	Criterion A
Electromagnetic RF field	EN 61000-4-3	80MHz-1GHz	10V/m	Criterion A
Fast transients (Burst)	EN 61000-4-4	Input lines	4kV	Criterion A
		Output lines	2kV	Criterion A
Surge voltage on input	EN 61000-4-5	$L \rightarrow N$	2kV	Criterion A
		$N/L \rightarrow PE$	4kV	Criterion A
Surge voltage on output	EN 61000-4-5	+ → -	500V	Criterion A
		+ / - → PE	500V	Criterion A
Conducted disturbance	EN 61000-4-6	0.15-80MHz	10V	Criterion A
Mains voltage dips	EN 61000-4-11	0% of 100Vac	0Vac, 20ms	Criterion A
		40% of 100Vac	40Vac, 200ms	Criterion C
		70% of 100Vac	70Vac, 500ms	Criterion C
Voltage interruptions	EN 61000-4-11		0Vac, 5000ms	Criterion C
Voltage sags	SEMI F47 0200		96Vac, 1000ms	Criterion A
			84Vac, 500ms	Criterion A
			60Vac, 200ms	Criterion A
Input voltage swells	PULS internal standard		300Vac, 500ms	Criterion A
Powerful transients	VDE 0160	over entire load range	750V, 1.3ms	Criterion C
Criterions:				

**Criterions:** 

**A:** Power supply shows normal operation behavior within the defined limits.

C: Temporary loss of function is possible. Power supply might shut-down and restarts by itself. No damages or hazards for the power supply occur.

EMC Emission	Generic standards: EN 61000-6-3 and EN 61000-6-4	
Conducted emission	EN 55011, EN 55022, FCC Part 15, CISPR 11, CISPR 22	Class B, input lines
	EN 55022	Class B, output lines
Radiated emission	EN 55011, EN 55022	Class B
Harmonic input current	EN 61000-3-2	Fulfilled, active PFC
Voltage fluctuations, flicker	EN 61000-3-3	Fulfilled

This device complies with FCC Part 15 rules.

Operation is subjected to following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Switching Frequencies		s four converters with four different switching frequencies constant. The others are input voltage and load dependent.
Switching frequency 1	100kHz	Resonant converter, nearly constant
Switching frequency 2	110kHz to 500kHz	Boost converter, input voltage and load dependent
Switching frequency 3	73kHz to 114kHz	PFC converter, input voltage and load dependent
Switching frequency 4	35-45kHz	Aux. Converter, input voltage and load dependent

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany




2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

QS20.481

48V, 10A, SINGLE PHASE INPUT

## **17. ENVIRONMENT**

Operational temperature	-25°C to +70°C (-13°F to 158°F)	reduce output power above +60°C
Output de-rating	12W/°C	60-70°C (140°F to 158°F), see Fig. 17-1
Storage temperature	-40 to +85°C (-40°F to 185°F)	storage and transportation
Humidity	5 to 95% r.H.	IEC 60068-2-30
		Do not energize while condensation is present
Vibration sinusoidal	2-17.8Hz: ±1.6mm; 17.8-500Hz: 2g 2 hours / axis	IEC 60068-2-6
Vibration random	0.5m²(s³) 2 hours / axis	IEC 60068-2-64
Shock	30g 6ms, 20g 11ms 3 bumps / direction, 18 bumps in total	IEC 60068-2-27
Altitude	0 to 6000m (0 to 20 000ft)	Reduce output power or ambient temperature above 2000m sea level.
Output de-rating (for altitude)	30W/1000m or 5°C/1000m	above 2000m (6500ft), see Fig. 17-2
Over-voltage category	III	EN 50178, altitudes up to 2000m
	II	Altitudes from 2000m to 6000m
Degree of pollution	2	EN 50178, not conductive

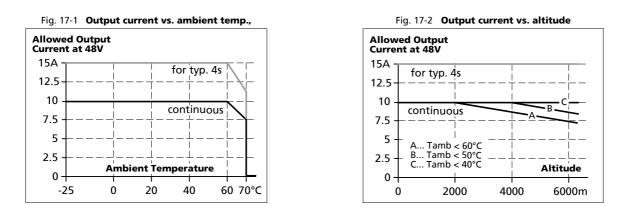

The ambient temperature is defined as the air temperature 2cm below the unit.

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

## **18. PROTECTION FEATURES**


Output protection	Electronically protected against overload, no-load and short-circuits			
Output over-current protection	Electronically limited	See Fig. 8-1		
Degree of protection	IP 20	EN/IEC 60529		
Penetration protection	> 3.5mm / >5mm	top side / bottom side, e.g. screws, small parts		
Over-temperature protection	yes	output shut-down with automatic restart		
Input transient protection	MOV (Metal Oxide Var	istor)		
Internal input fuse	T10A H.B.C.	not user replaceable		
Note: In case of a protection even	t. audible noise may occur.			

se of a protection event, audible noise may occur.

## **19. SAFETY**

Input / output separation	SELV	IEC/EN 60950-1
	PELV	EN 60204-1, EN 50178, IEC 60364-4-41
	double or reinforce	ed insulation
Class of protection	I	PE (Protective Earth) connection required
Isolation resistance	> 5MOhm	input to output, 500Vdc
PE resistance	< 0.10hm	between housing and PE terminal
Touch current (leakage current)	typ. 0.23mA	100Vac, 50Hz, TN mains
	typ. 0.34mA	120Vac, 60Hz, TN mains
	typ. 0.58mA	230Vac, 50Hz, TN mains
	< 0.31mA	110Vac, 50Hz, TN mains
	< 0.45mA	132Vac, 60Hz, TN mains
	< 0.80mA	264Vac, 50Hz, TN mains

## **20. DIELECTRIC STRENGTH**

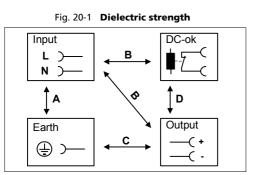

		Α	В	С	D
Type test	60s	2500Vac	3000Vac	500Vac	500Vac
Factory test	5s	2500Vac	2500Vac	500Vac	500Vac
Field test	5s	2000Vac	2000Vac	500Vac	500Vac

Type tests and factory tests:

Conducted by the manufacturer. Do not repeat test in field! Rules for field test:

Use appropriate test equipment which applies the voltage with a slow ramp! Connect L and N together as well as all output poles.

The output voltage is floating and has no ohmic connection to ground.

To fulfill the PELV requirements according to EN60204-1 § 6.4.1, we recommend that either the + pole, the – pole or any other part of the output circuit shall be connected to the protective earth system. This helps to avoid situations in which a load starts unexpectedly or can not be switched off any more when unnoticed earth faults occur.

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

DIMENSION Q-Series

QS20.481

48V, 10A, SINGLE PHASE INPUT

## 21. APPROVALS

IEC 60950-1	IECEE cb scheme	CB Scheme, Information Technology Equipment		
UL 508	18WM LISTED IND. CONT. EQ.	LISTED E198865 Industrial Control Equipment		
UL 60950-1	c <b>RN</b> us	RECOGNIZED E137006 recognized for the use in U.S.A. (UL 60950- 1) and Canada (C22.2 No. 60950) Information Technology Equipment, Level 5		
Marine pending	( ABS	GL (Germanischer Lloyd) classified and ABS (American Bureau for Shipping) PDA for marine and offshore applications. Environmental category: C, EMC2		

## 22. FULFILLED STANDARDS

EN 61558-2-17	Safety of Power Transformers				
EN/IEC 60204-1	Safety of Electrical Equipment of Machines				
EN/IEC 61131-2	Programmable Controllers				
EN 50178, IEC 62103	Electronic Equipment in Power Installations				
SEMI F47	SEMI F47-0200, Ride-through compliance for semiconductor industry. Full SEMI range compliance (Input: 120Vac or 208Vac, output: 480W)				
UL1604	Hazardous Location Class I Div 2 T3C Groups A,B,C,D				

## 23. USED SUBSTANCES

The unit does not release any silicone and is suitable for the use in paint shops.

The unit conforms to the RoHS directive 2002/96/EC

Electrolytic capacitors included in this unit do not use electrolytes such as Quaternary Ammonium Salt Systems.

Plastic housings and other molded plastic materials are free of halogens.

The production material within our production does not include following toxic chemicals: Polychlorized Biphenyl (PCB), Polychlorized Terphenyl (PCT), Pentachlorophenol (PCP), Polychlorinated naphthalene (PCN), Polybrom Biphenyll (PBB), Polybrom Bipheny-oxyd (PBO), Polybrominated Diphenylether (PBDE), Polychlorinated Diphenylether (PCDE), Polydibromphenyl Oxyd (PBDO), Cadmium, Asbest, Mercury, Silicia

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France E-mail:hvssystem@hvssystem.com Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

Site web : www.hvssystem.com

#### DIMENSION Q-Series

**QS20.481** 48V, 10A, SINGLE PHASE INPUT

24. PHYSICAL DIMENSIONS AND WEIGHT Weight 1200g / 2.65lb DIN-Rail Use 35mm DIN-rails according to EN 60715 or EN 50022 with a height of 7.5 or 15mm. The DIN-rail height must be added to the depth (127mm) to calculate the total required installation depth. Electronic files with mechanical data can be downloaded at www.pulspower.com Fig. 24-1 Front view Fig. 24-2 Side view 43.7 35.5 Height: 124mm, 4.88' 48-55V ſ DC ok O Overload O DC ok L PE .6 Depth: 127mm, 5.0" Width: 82mm DIN-Rail depth 3.23

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

## **25. INSTALLATION AND OPERATION INSTRUCTIONS**

#### Mounting and installation:

Output terminal must be located on top and input terminal on the bottom. For other orientations see section 27.14. An appropriate electrical and fire end-product enclosure needs to be considered in the end use application.

#### **Cooling:**

Convection cooled, no forced cooling required. Do not cover ventilation grid (e.g. cable conduits) by more than 30%!

#### Installation clearances:

40mm on top, 20mm on the bottom, 5mm on the left and right side are recommended when loaded permanently with full power. In case the adjacent device is a heat source, 15mm clearance is recommended.

#### Risk of electrical shock, fire, personal injury or death!

Do not use the unit without proper earth connection (Protective Earth). Use the pin on the terminal block for earth connection and not one of the screws on the housing.

Turn power off before working on the power supply. Protect against inadvertent re-powering.

Make sure the wiring is correct by following all local and national codes.

Do not open, modify or repair the unit.

Use caution to prevent any foreign objects from entering into the housing.

Do not use in wet locations or in areas where moisture or condensation can be expected.

#### Service parts:

The unit does not contain any serviceable parts. The tripping of an internal fuse is caused by an internal defect. If damage or malfunctioning should occur during operation, immediately turn power off and send unit to factory for inspection!

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany




2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29


## 26. ACCESSORY

#### ZM1.WALL Wall mounting bracket

This bracket is used to mount Dimension units onto a flat surface without utilizing a DIN-Rail. The two aluminum brackets and the black plastic slider of the unit have to be detached, so that the two steel brackets can be mounted.

Fig. 26-1 ZM1.WALL Wall Mounting Bracket

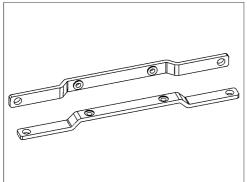


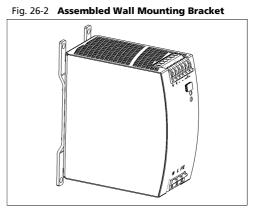

Please note: Symbolic drawing, picture show a different model


### ZM15.SIDE Side mounting bracket

This bracket is used to mount Dimension units sideways with or without utilizing a DIN-Rail. The two aluminum brackets and the black plastic slider of the unit have to be detached, so that the steel brackets can be mounted. For sideways DIN-rail mounting, the removed aluminum brackets and the black plastic slider need to be mounted on the steel bracket.

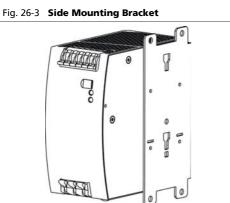

Please note: Symbolic drawing, picture show a different model

#### Fig. 26-4 Side Mounting with DIN-rail brackets

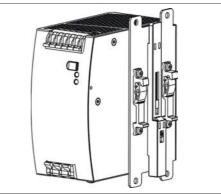

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

DIMENSION Q-Series


48V, 10A, SINGLE PHASE INPUT

## 27. APPLICATION NOTES

## 27.1. REPETITIVE PULSE LOADING

Typically, a load current is not constant. It varies over time. For pulse load compatibility, following rules must be met:

- The pulse power demand must be below 150% of the nominal power. a)
- b) The duration of the pulse power must be shorter than the allowed Bonus Time. (see output section)
- The average (R.M.S.) output current must be below the specified continuous output current. c) If the R.M.S. current is higher, the unit will respond with a thermal shut-down after a while. Use the max. duty
- cycle curve (Fig. 27-2) to check if the average output current is below the nominal current.
- d) For altitudes higher than 2000m reduce the pulse loading (30W/1000m) or the ambient temperature (5°C/1000m)

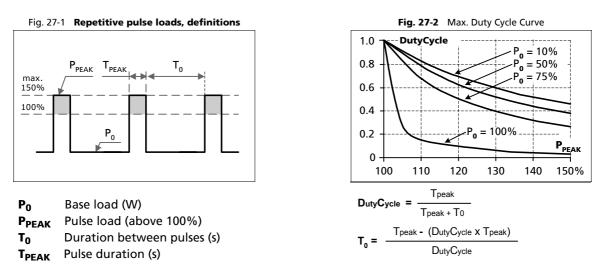

### **Utilizing the Max. Duty Cycle Curve:**

Example to determine the repetition rate of pulses without dipping of the output voltage:

Parameters of application:

Determining the repetition rate:

Pulse length is TPEAK = 1s

- 1) make a vertical line at P<sub>PEAK</sub> = 150%
  - 2) make a horizontal line where the vertical line crosses the  $P_0 = 50\%$  curve
- 3) Read the Max. Duty Cycle from the Duty Cycle-axis (= 0.37)

Steady state load Po=120W (= 50% of  $I_{RATED}$ )

4) Calculate the min. pause (base load) length T<sub>0</sub>:

Peak load PPEAK = 360W (= 150% of I<sub>RATED</sub>)

 $\frac{\text{Tpeak - (DutyCycle x Tpeak)}}{\text{DutyCycle}} = \frac{1s - (0.37 x 1s)}{0.37} = 1.7s$ 

- 5) Pulse length = 1s, min. pause length = 1.7s
- Max. repetition rate = pulse length +pause length = 2.7s 6)

#### More examples for pulse load compatibility:

P <sub>PEAK</sub>	Po	T <sub>PEAK</sub>	To	P <sub>PEAK</sub>	Po	T <sub>PEAK</sub>	T <sub>0</sub>
720W	480W	1s	>25s	720W	240W	0.1s	>0.16s
720W	0W	1s	>1.3s	720W	240W	1s	>1.6s
600W	240W	1s	> 0.75s	720W	240W	3s	>4.9s

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France E-mail:hvssystem@hvssystem.com Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

Site web : www.hvssystem.com


### DIMONSION Q-Series

## 27.2. PEAK CURRENT CAPABILITY

Solenoids, contactors and pneumatic modules often have a steady state coil and a pick-up coil. The inrush current demand of the pick-up coil is several times higher than the steady state current and usually exceeds the nominal output current (including the Bonus Power<sup>®</sup>) The same situation applies, when starting a capacitive load.

Branch circuits are often protected with circuit breakers or fuses. In case of a short or an overload in the branch circuit, the fuse needs a certain amount of over-current to trip or to blow. The peak current capability ensures the safe operation of subsequent circuit breakers.

Assuming the input voltage is turned on before such an event, the built-in large sized output capacitors inside the power supply can deliver extra current. Discharging this capacitor causes a voltage dip on the output. The following two examples show typical voltage dips:

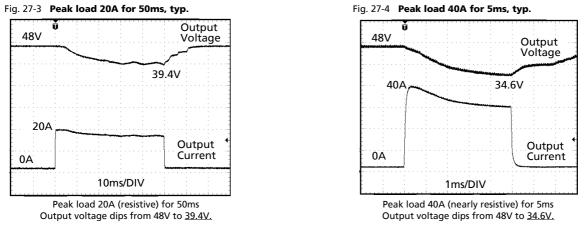

Please note: The DC-OK relay triggers when the voltage dips more than 10% for longer than 1ms.

## 27.3. BACK-FEEDING LOADS

Loads such as decelerating motors and inductors can feed voltage back to the power supply. This feature is also called return voltage immunity or resistance against Back- E.M.F. (Electro Magnetic Force).

This power supply is resistant and does not show malfunctioning when a load feeds back voltage to the power supply. It does not matter, whether the power supply is on or off.

The maximum allowed feed back voltage is 58Vdc. The absorbing energy can be calculated according to the built-in large sized output capacitor which is specified in chapter 8. If the feed back voltage gets higher than 58Vdc, the power supply responds with a shut-down and a subsequent start-up attempt.

## 27.4. CHARGING OF BATTERIES

The power supply can be used for float-charging of lead-acid or maintenance free 48V VRLA batteries.

### Instructions for charging batteries:

a) Set the output voltage, at disconnected load, very precisely to the end-of-charge voltage according to the expected battery temperature.

End-of-charge voltage	55.6V	55.0V	54.3V	53.6V
Battery temperature	10°C	20°C	30°C	40°C

b) Use a 13A circuit breaker (or blocking diode ) between the power supply and the battery.

- c) Ensure that the output current of the power supply is below the allowed charging current of the battery.
- d) Use only matched batteries when putting 12V types in series.
- e) The return current to the power supply is typ. 10mA at 55Vdc when the power supply is switched off.

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

#### DIMENSION Q-Series


## 27.5. OUTPUT CIRCUIT BREAKERS

Standard miniature circuit breakers (MCBs) can be used for branch protection. Ensure that the MCB is rated for DC voltage, too. The following tests show which circuit breakers the power supply typically trips.

Circuit breakers have huge tolerances in their tripping behavior. Therefore, these typical tests can only be used as a recommendation or for comparing two different power supplies. Furthermore, the loop impedance has a major influence on whether a breaker trips or not. Two tests were performed, representing typical situations:


Test 1: Short circuit with S1 on the power supply end of the cable (loop impedance approx. 20mOhm)



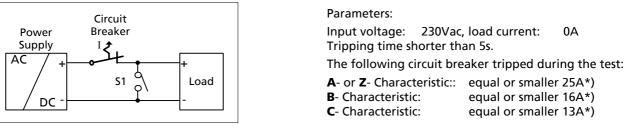

Test 2: Short circuit with S1 on the load end (additional impedance included; represents longer load wire length).



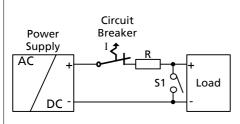

#### Parameters:

Input voltage: 230Vac, load current: 0A Tripping time shorter than 5s.

The following circuit breaker tripped during the test:

A- or Z- Characteristic::	≤ 20A and R< 82mOhm*)
B- Characteristic:	≤ 16A and R< 82mOhm*)

**C**- Characteristic:  $\leq 6A$  and R< 180mOhm\*)

#### What does this resistance mean in wire length?

	0.5mm <sup>2</sup>	<b>0.7mm</b> <sup>2</sup>	<b>1.0mm</b> <sup>2</sup>	1.5mm <sup>2</sup>	<b>2.5mm</b> <sup>2</sup>	<b>4.0mm</b> <sup>2</sup>
82mOhm	2.3m	3.2m	4.6m	6.9m	11.4m	18.3m
180mOhm	5.0m	7.0m	10.0m	15.0m	25.1m	40.1m

\*) A list of the circuit breakers under test is available on request.

#### Example:

Which wire gauge must be used to trip a C-Characteristic circuit breaker with a rating of 6A? The load wire length is 21m.

Answer: A 6A C-Characteristic circuit breaker requires a loop impedance of less than 180mOhm (test results). The wire length table shows that up to 25.1m wire with a cross section of 2.5mm<sup>2</sup> are below 180mOhm. A wire not smaller than 2.5mm<sup>2</sup> shall be used.

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

## 27.6. EXTERNAL INPUT PROTECTION

**PULS** 

DIMENSION Q-Series

The unit is tested and approved for branch circuits up to 20A. External protection is only required, if the supplying branch has an ampacity greater than this. In some countries local regulations might apply. Check also local codes and local requirements.


If an external fuse is necessary or utilized, a minimum value is required to avoid undesired tripping of the fuse.

		<b>B-Characteristic</b>	C-Characteristic
Ampacity	max.	20A	20A
	min.	10A	10A

## 27.7. PARALLEL USE TO INCREASE OUTPUT POWER

Power supplies can be paralleled to increase the output power.



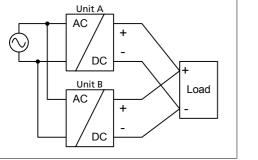

#### Instructions for parallel use:

- a) Use only power supplies from the same series (Q-Series).
- Adjust the output voltages of all power supplies to approximately the same value (±1V).
  Otherwise, the DC-ok signal might not work properly.
- c) A fuse (or diode) on the output is only required if more than three units are connected in parallel.
- d) Do not continuously load the terminals with more than 25A. Follow wiring instructions according to chapter 27.9
- e) Keep an installation clearance of 15mm (left/right) between two power supplies and avoid installing the power supplies on top of each other.

## 27.8. PARALLEL USE FOR REDUNDANCY

Power supplies can be paralleled for redundancy to gain a higher system availability. Redundant systems require a certain amount of extra power to support the load in case one power supply unit fails. The simplest way is to put two Q-Series power supplies in parallel. This is called a 1+1 redundancy. In case one power supply unit fails, the other one is automatically able to support the load current without any interruption. Redundant systems for a higher power demand are usually built in a N+1 method. E.g. Five power supplies, each rated for 10A are paralleled to build a 40A redundant system.

**Please note:** This simple way to build a redundant system does not cover failures such as an internal short circuit in the secondary side of the power supply. In such a - virtually nearly impossible - case, the defect unit becomes a load for the other power supplies and the output voltage can not be maintained any more. This can only be avoided by utilizing decoupling diodes which are included in the decoupling module YR2.DIODE.

Recommendations for building redundant power systems:

- a) Use separate input fuses for each power supply.
- b) Monitor the individual power supply units. A DC-ok LED and a DC-ok contact is already included in the units. This feature reports a faulty unit.
- c) When possible, connect each power supply to different phases or circuits.
- d) It is desirable to set the output voltages of all power supplies to the same value to avoid a false DC-ok signal.

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany





2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

# 

## 27.9. DAISY-CHAINING OF OUTPUTS


Daisy chaining (jumping from one power supply output to the next) is allowed as long as the max. current through one terminal pin does not continuously exceed 20A. If the current is higher, use a separate distribution terminal.

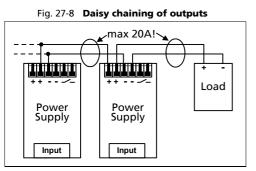

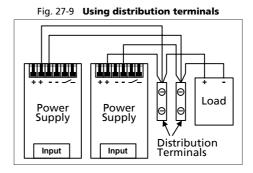

## 27.10. SERIES OPERATION

The power supply can be put in series to increase the output voltage.

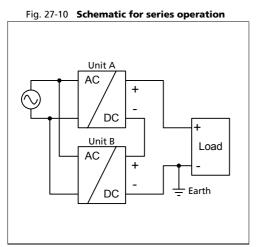

### Instructions for use in series:

- a) It is possible to connect as many units in series as needed, providing the sum of the output voltage does not exceed 150Vdc.
- b) Voltages with a potential above 60Vdc are not SELV any more and can be dangerous. Such voltages must be installed with a protection against touching.
- c) For serial operation use power supplies of the same type.
- d) Earthing of the output is required when the sum of the output voltage is above 60Vdc.
- e) Keep an installation clearance of 15mm (left/right) between two power supplies and avoid installing the power supplies on top of each other.

<u>Note:</u> Avoid return voltage (e.g. from a decelerating motor or battery) which is applied to the output terminals.

## 27.11. INDUCTIVE AND CAPACITIVE LOADS

The unit is designed to supply any kind of load, including unlimited capacitive and inductive loads.

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29


E-mail:hvssystem@hvssystem.com Site web : www.hvssystem.com

#### DIMENSION Q-Series

46V, TUA, SINGLE FRASE IN

### 27.12. OPERATION ON TWO PHASES

Fig. 27-11 Schematic for two phase operation

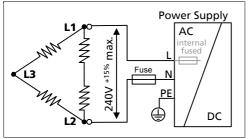

#### Instructions for two phase operation:

- a) A phase to phase connection is allowed as long as the supplying voltage is below 240V<sup>+15%</sup>.
- b) Use a fuse or a circuit breaker to protect the N input. The N input is internally not protected and is in this case connected to a hot wire.

Appropriate fuses or circuit breakers are specified in section 27.6 "External Input Protection".

## 27.13. Use in a Tightly Sealed Enclosure

When the power supply is installed in a tightly sealed enclosure, the temperature inside the enclosure will be higher than outside. The inside temperature defines the ambient temperature for the power supply.

Results from such an installation:

Power supply is placed in the middle of the box, no other heat producer inside the box

Enclosure:Rittal Type IP66 Box PK 9522 100, plastic, 254x180x165mmLoad:48V, 8A; (=80%) load is placed outside the boxInput:230VacTemperature inside enclosure:48.2°C (in the middle of the right side of the power supply with a distance of 2cm)Temperature rise:24.2°CTemperature rise:24K

May 2007 / Rev. 1.2 DS-QS20.481-EN All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29


DIMONSION Q-Series

## 27.14. MOUNTING ORIENTATIONS

Mounting orientations other than input terminals on the bottom and output on the top require a reduction in continuous output power or a limitation in the max. allowed ambient temperature. The amount of reduction influences the lifetime expectancy of the power supply. Therefore, two different derating curves for continuous operation can be found below:

#### Curve A1 Recommended output current.

**Curve A2** Max allowed output current (results approx. in half the lifetime expectancy of A1).

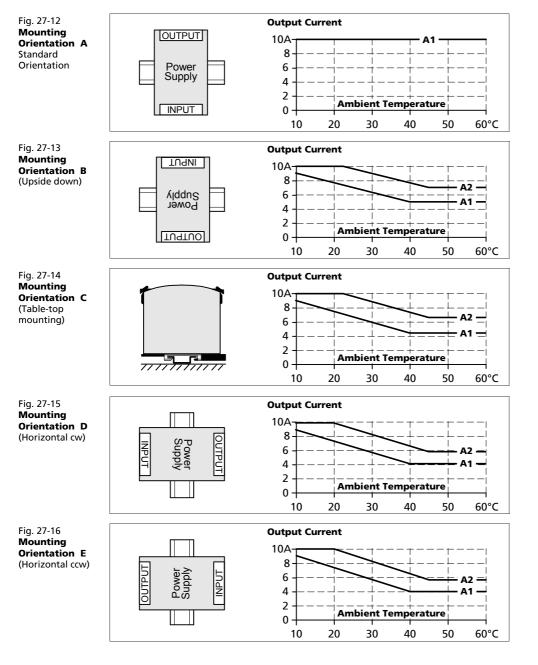

May 2007 / Rev. 1.2 DS-QS20.481-EN

All parameters are specified at 48V, 10A, 230Vac, 25°C ambient and after a 5 minutes run-in time unless otherwise noted.

www.pulspower.com Phone +49 89 9278 0 Germany



2 rue René Laennec 51500 Taissy France Fax: 03 26 85 19 08, Tel : 03 26 82 49 29 E-mail:hvssystem@hvssystem.com Site web : www.hvssystem.com